SPARE PARTS EXPLODED VIEW
STORAGE GAS WATER HEATERS

Model

NHRE PROTECH

R8202820-04 - 24/06/2013

EN | FR | IT | ES | DE

Col	Reference	Model type	Begin	End
1	006480	NHRE 18 ARISTON	03-1998	-
1	006485	NHRE 18 RADI	03-1998	11-2009
1	006490	NHRE 18 SITAM	03-1998	11-2009
1	006495	NHRE 18 SIMAT	03-1998	03-2008
2	006481	NHRE 26 ARISTON	03-1998	-
2	006486	NHRE 26 RADI	03-1998	11-2009
2	006491	NHRE 26 SITAM	03-1998	11-2009
2	006496	NHRE 26 SIMAT	03-1998	03-2008
3	006482	NHRE 36 ARISTON	03-1998	-
3	006487	NHRE 36 RADI	03-1998	11-2009
3	006492	NHRE 36 SITAM	03-1998	11-2009
3	006497	NHRE 36 SIMAT	03-1998	03-2008
4	006483	NHRE 60 ARISTON	03-1998	-
4	006488	NHRE 60 RADI	03-1998	11-2009
4	006493	NHRE 60 SITAM	03-1998	11-2009
4	006498	NHRE 60 SIMAT	03-1998	03-2008
5	006484	NHRE 90 ARISTON	03-1998	-
5	006489	NHRE 90 RADI	03-1998	11-2009
5	006494	NHRE 90 SITAM	03-1998	11-2009
5	006499	NHRE 90 SIMAT	03-1998	03-2008

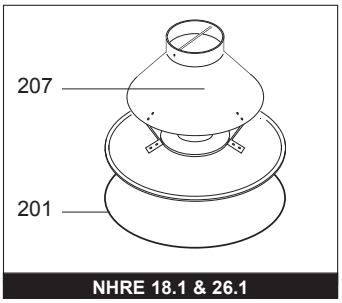

NHRE 18.1 & 26.1

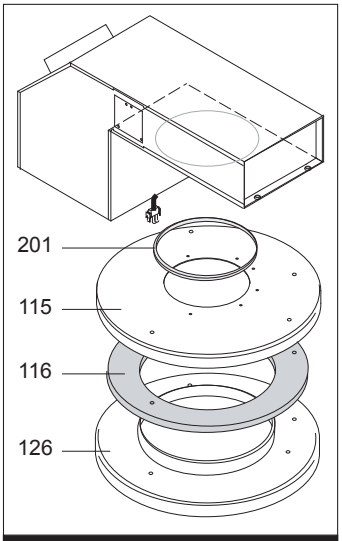

NHRE 90

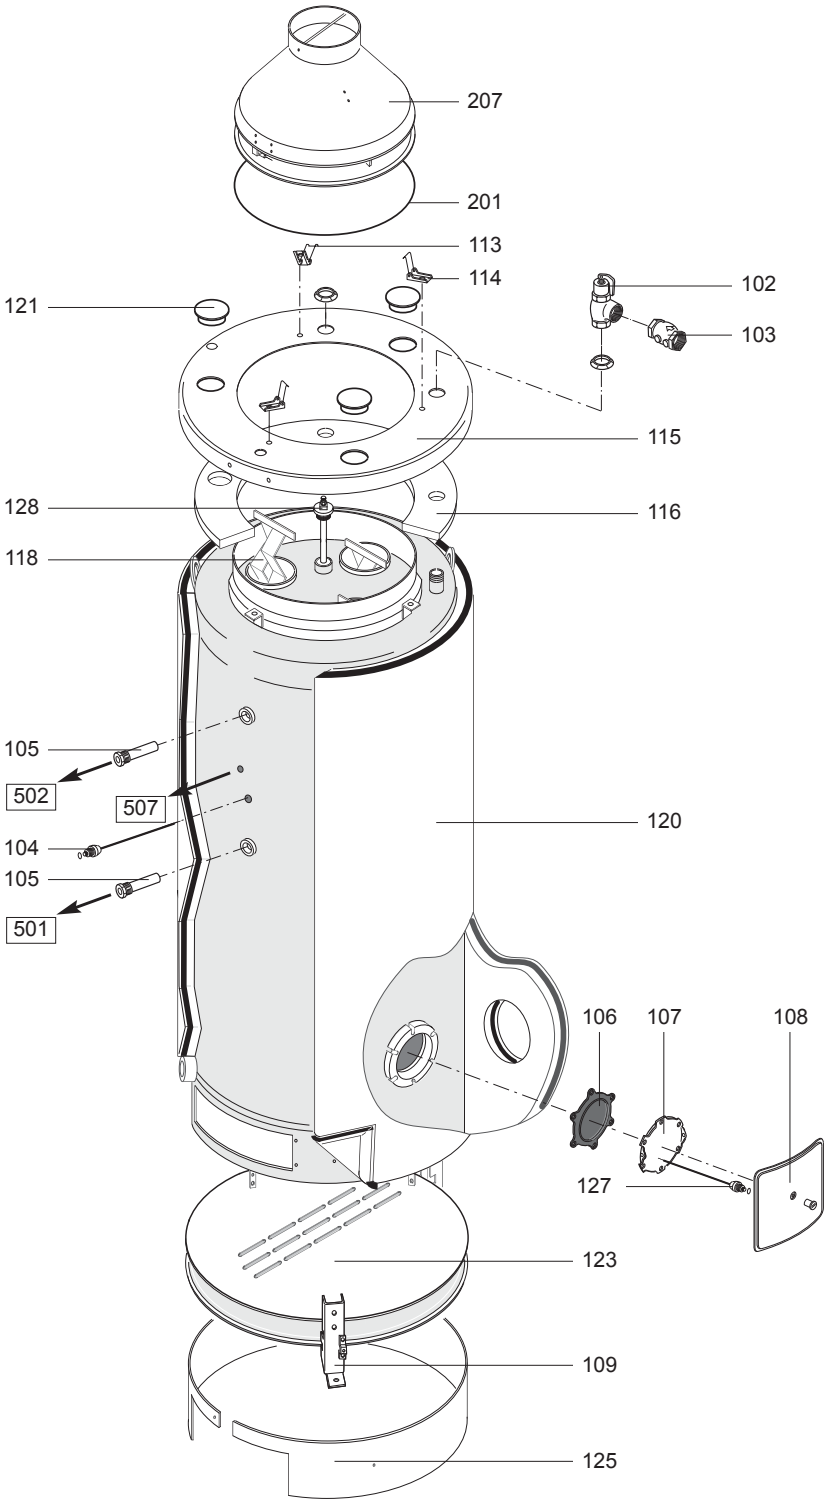

	Description	Manf. Pt. N	Type	NHRE 18	NHRE 26	NHRE 36	NHRE 60	NHRE 90	31	
				1	2	3	4	5		
0100	**FRONT CASE**									
0102	PRESSURE RELIEF VALVE	340001				●	●			
	PRESSURE RELIEF VALVE	340005		●	●					
	PRESSURE RELIEF VALVE	340258						●		
0103	NOT RETURN VALVE	340003		●	●	●	●			
	ONE WAY VALVE	340184						●		
0104	ELECTRODE	340407		●	●	●	●	●		
0105	SHEATH (THERMOSTAT)	338328		●	●	●	●	●		
0106	D.106 FLANGE GASKET	290139	PROTECH	●	●	●	●	●		
	GASKET (INSPECTION FLANGE)	343356		●	●	●	●	●		
0107	FLANGE D:110 (ANODE PROTECH)	61400338	PROTECH	●	●	●	●	●		
	INSPECTION FLANGE	397399		●	●	●	●	●		
0108	COVER (INSPECTION)	342068		●	●	●	●	●		
0109	FOOT	336648		●	●	●	●	●		
0113	FIXING BRACKET (UPPER COVER)	337468		●	●	●	●	●		
0114	FIXING BRACKET (FLUE HOOD)	337760		●	●	●	●	●		
0115	UPPER COVER	337459						●		
	UPPER COVER	337917		●	●	●	●			
0116	INSULATING PANEL	343469						●		
	INSULATING PANEL	343489		●	●	●	●			
0118	FLUE BAFFLE	337831		●						04/01
	FLUE BAFFLE	337833				●				
	FLUE BAFFLE	337834					●			
	FLUE BAFFLE	337913						●		
	FLUE BAFFLE	337954		●					05/01	
	FLUE BAFFLE	337963			●				01/02	
0120	OUTER COVERING	343464		●						
	OUTER COVERING	343465			●	●				
	OUTER COVERING	343467						●		
0121	ANODE PLUG CAP	342066		●	●	●	●	●		
0123	AIR GRATE	337638			●	●				
	AIR GRATE	337769		●						
	AIR GRATE	337789						●		
0125	LOWER COVER	337765		●	●	●	●			
	LOWER COVER	337802						●		
0127	ANODE (PROTECH)	340406		●	●	●	●	●		
0128	KIT DRAIN SCREW + ANODE	60001635		●	●	●	●	●	07/10	
0200	**FAN ASSEMBLY**									
0201	BACKFLOW HOOD GASKET	343344						●		
	GASKET (FLUE HOOD)	343006		●	●	●	●			
0207	FLUE HOOD WITH FLUE PROTECTION	61400358		●						04/01
	FLUE HOOD WITH FLUE PROTECTION	61400360				●				
	FLUE HOOD WITH FLUE PROTECTION	61400361					●			
	FLUE HOOD WITH FLUE PROTECTION	61400362						●		
	FLUE HOOD WITH FLUE PROTECTION 18.1	61400363		●					05/01	
	FLUE HOOD WITH FLUE PROTECTION 26.1	61400364			●				01/02	

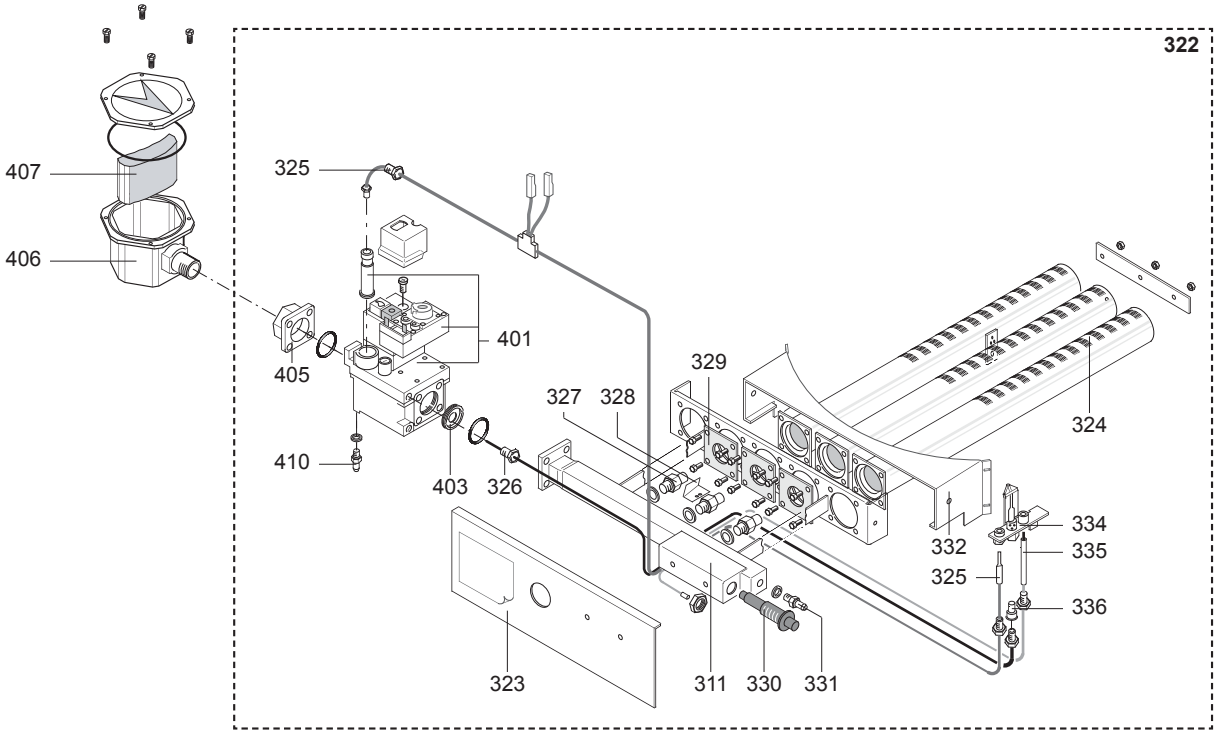
322
407
406
325
401
405
329
327
328
324
410
403
326
334
332
335
325
336
323
311
330
331

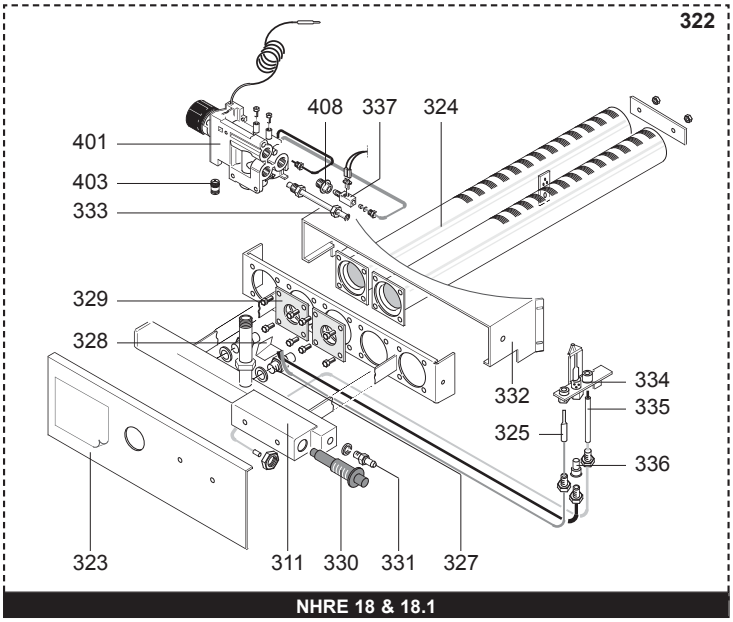
322
408
337
324
401
403
333
329
328
334
332
335
325
336
323
311
330
331
327

NHRE 18 & 18.1

	Description	Manf. Pt. N	Type	NHRE 18	NHRE 26	NHRE 36	NHRE 60	NHRE 90
				1	2	3	4	5
0300	**BURNER ASSEMBLY**							
0311	GAS COLLECTOR	339446			●	●		
	GAS COLLECTOR	339448					●	
	GAS COLLECTOR	339450						●
0322	BURNER (NG)	339407	NAT	●				
	BURNER (NG)	339408	NAT		●			
	BURNER (NG)	339409	NAT			●		
	BURNER (NG)	339411	NAT				●	
	BURNER (NG)	339413	NAT					●
0323	CASE DOOR (FRONT)	337775		●	●	●	●	
	CASE DOOR (FRONT)	337792						●
0324	BURNER (L=560MM)	339328				●	●	
	BURNER (L=600MM)	339327						●
	BURNER (PILOT SUPPORT) L=520MM	339331		●	●			●
	BURNER (WITH L=560MM PILOT SUPPORT)	339329				●	●	
	BURNER L=520MM	339330		●	●		●	●
0325	THERMOCOUPLE	340327		●				
	THERMOCOUPLE	990121			●	●	●	●
0326	PILOT BURNER INLET PIPE	338345				●	●	
	PILOT BURNER INLET PIPE	338347			●			●
	PILOT BURNER INLET PIPE	338373		●				
0327	INJECTOR D: 1.70	339458	B/P		●			●
	INJECTOR D: 1.90	339451	B/P			●	●	
	INJECTOR D: 2.10	339356	B/P					●
	INJECTOR D: 3.25	339352	NAT			●	●	
	INJECTOR D: 3.65	339353	NAT					●
	MAIN BURNER JET	339354	B/P	●			●	●
	MAIN BURNER JET	339351	NAT	●	●		●	●
0328	BAFFLE PLATE	337049		●	●	●	●	●
0329	AIR LIMITER	337041	NAT	●				
	NG D.26 AIR LIMITER	337534	NAT		●			
	NG D.28 AIR LIMITER	337703	NAT				●	●
0330	IGNITER	340019		●	●	●	●	●
0331	INTAKE (PRESSURE)	346086		●	●	●	●	●
0332	BURNER SUPPORT	337763		●	●	●	●	
	BURNER SUPPORT	337788						●
0333	PIPE (GAS INLET)	338476		●				
0334	BURNER (PILOT)	339377		●	●	●	●	●
0335	IGNITION ELECTRODE WITH CABLE	340261		●	●	●	●	●
0336	BURNER JET (PILOT)	339357	B/P	●	●	●	●	●
	BURNER JET (PILOT)	289202	NAT	●	●	●	●	●
0337	SAFETY BLOCK	340081		●				
0400	**GAS SECTION**							
0401	GAS VALVE	340259			●	●	●	●
	GAS VALVE (LPG)	340366	B/P	●				
	GAS VALVE (NG)	340365	NAT	●				
0403	RESTRICTOR D: 10.60	346202	NAT					●
	RESTRICTOR D: 2.5	346184	NAT	●				
	RESTRICTOR D: 2.8	346185	B/P	●				
	RESTRICTOR D: 6.0	346179	NAT		●			
	RESTRICTOR D: 7.50	346177				●		
	RESTRICTOR D: 8.85	346178	NAT				●	
0405	GAS VALVE FLANGE	346084		●	●	●	●	●
0406	GAS FILTER	340336		●	●	●	●	●
0407	GAS FILTER CARTRIDGE	340337		●	●	●	●	●
0408	ELECTROMAGNET	340364		●				
0410	INTAKE (PRESSURE)	346086			●	●	●	●

500

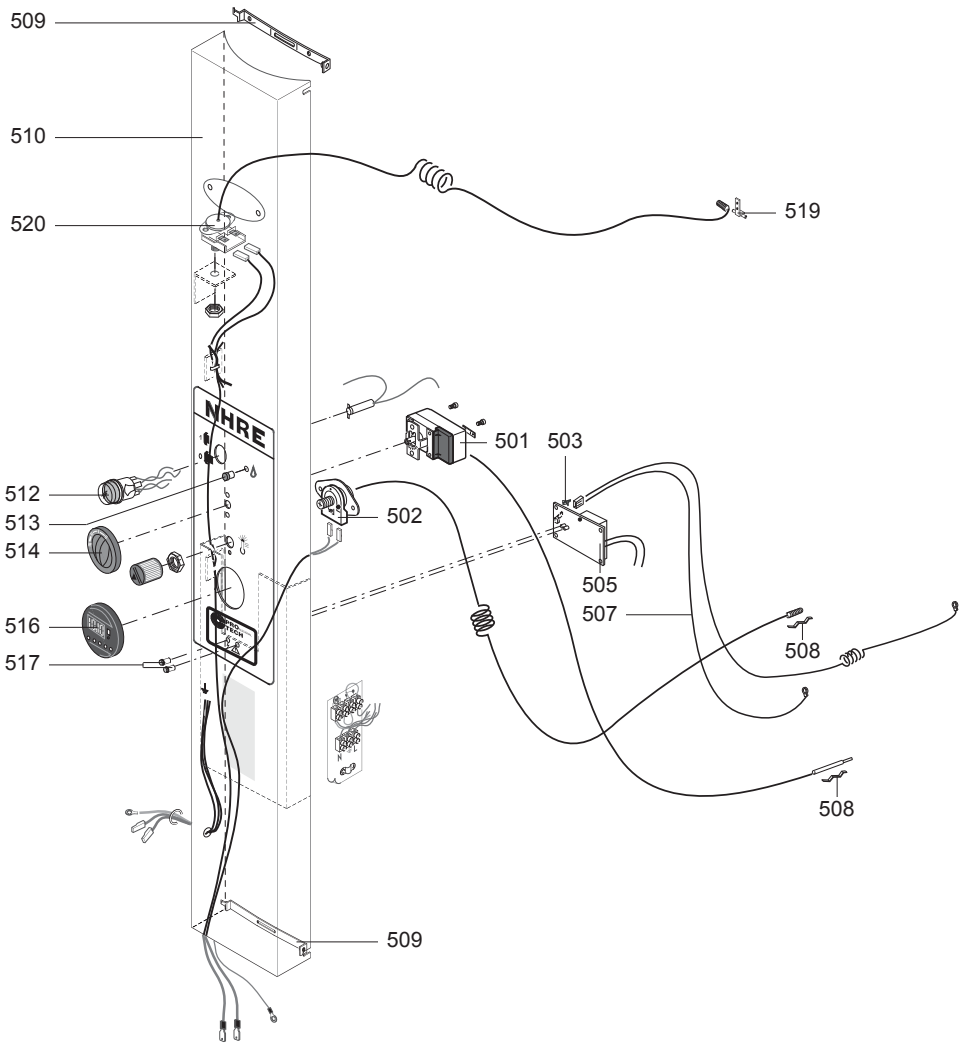
509
510
520
519
NHRE
501
503
512
513
514
502
505
507
508
516
517
508
509

5000

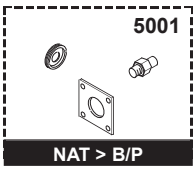
5001
NAT > B/P

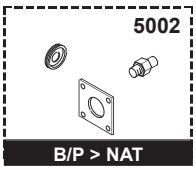
5002
B/P > NAT

	Description	Manf. Pt. N	Type	NHRE 18 / NHRE 26 / NHRE 36 / NHRE 60 / NHRE 90																		
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	31
0500	**ELECTRICAL BOX**																					
0501	THERMOSTAT (REGULATION)	340367			●	●	●	●														
0502	HEAT SENOR	340358		●	●	●	●	●														
0503	FIXING CLIPS	925296		●	●	●	●	●														
0505	P.C.B. (ANODE - PROTECH)	925348-01		●	●	●	●	●														
0507	CABLE (ELECTRODE - L=300MM)	340410		●	●	●	●	●														
0508	FIXING SPRING (THERMOSTAT)	337544		●	●	●	●	●														
0509	FIXING BRACKET (SWITCHES)	337761		●	●	●	●	●														
0510	CONTROL FACIA	337863		●																		
	CONTROL FACIA	337865					●															
	CONTROL FACIA	337866						●														
	CONTROL PANEL (COMPLETE)	337864			●	●																
0512	BIPOLAR SWITCH	341170			●	●	●	●														
0513	COMPLETE SIGNAL LAMP	341169			●	●	●	●														
0514	THERMOSTAT REGULATION KNOB	397384					●	●														
	THERMOSTAT REGULATION KNOB	397417			●	●																
0516	TIMER OPENING COVER	342070			●	●	●	●														
0517	SIGNAL LAMP CAP	341300		●	●	●	●	●														
0519	THERMAL PROTECTION BRACKET	337779		●	●	●	●	●														
0520	HEAT SENOR	340358		●																		04/01
	HEAT SENOR	340358			●	●	●	●														
	HEAT SENOR	340393		●																		05/01
5000	**ACCESSORIES**																					
5001	CONVERSION KIT NAT > LPG	60000319		●																		
	CONVERSION KIT NAT > LPG	60000320			●																	
	CONVERSION KIT NAT > LPG	60000321				●																
	CONVERSION KIT NAT > LPG	60000323					●															
	CONVERSION KIT NAT > LPG	60000325						●														
5002	CONVERSION KIT LPG > NAT	60000326		●																		
	CONVERSION KIT LPG > NAT	60000327			●																	
	CONVERSION KIT LPG > NAT	60000328				●																
	CONVERSION KIT LPG > NAT	60000330					●															
	CONVERSION KIT LPG > NAT	60000332						●														

LIST OF THE ABBREVATIONS

HW	:	Hot water.
CW	:	Cold water.
C	:	Ceramic resistance (normal heating).
Ca	:	Ceramic resistance (accelerated heating)
TP	:	Immersion heater.
1F	:	With fittings.
2F	:	Without fittings.
3F	:	With fittings and another outlet connection.
AMI	:	With mixing valve.
SMI	:	Without mixing valve.
PUISS	:	Power of th appliance.
PN	:	Appliance with normal pression.
LP	:	Appliance with low pression.
PV	:	Appliance with variable power.
PF	:	Appliance with fixed power.

IDENTIFICATION PLATE

SERIAL NUMBER

12 Characters : 924 2 3 134 0115
- 924 — Product reference
- 2 — Year of manufacture
- 3 — Month of manufacture
- 134 — Manufacturing day
- 0115 — Sequencial number

15 Characters : 03 126 0001 893077
- 03 — Year of manufacture
- 126 — Manufacturing day
- 0001 — Sequencial number
- 893077 — Product reference

9 Characters : D 97 442118
- D — Month of manufacture : A ➟ January, B ➟ Febuary, C ➟ March, etc...
- 97 — Year of manufacture
- 442118 — Sequencial number

10 Characters : 05 01 000001
- 05 — Year of manufacture
- 01 — Month of manufacture
- 000001 — Sequencial number

11 Characters : 05 09 0093320
- 05 — Year of manufacture
- 09 — Month of manufacture
- 0093320 — Sequencial number

21 Characters : 3000115 XX 08115 0000001
- 3000115 — Product reference
- XX
- 08115 — Year (08) / Manufacturing day (115)
- 0000001 — Sequencial number

22 Characters : 3000115 XX 070416 0000001
- 3000115 — Product reference
- XX
- 070416 — Year (07) / Month (04) / Manufacturing day (16)
- 0000001 — Sequencial number

The indications mentionned on the prices, commercial or technical literature and the scheme are written for your guidance and are available at a given time. The CONSTRUCTOR retains the power to modify the presentation, the form, the size, the conception or the material of the products.